



POINT CONTINENTAL LED


mounting instruction 180

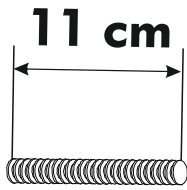


x 8

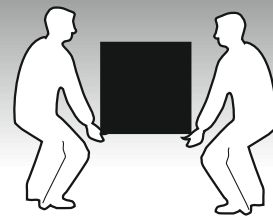


x 8

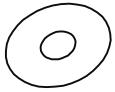

x 8

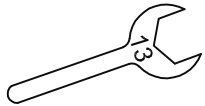


x 1

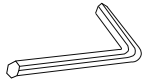

x 1


Middle board x 1

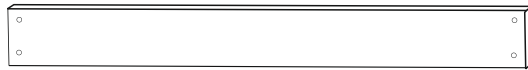

M6x45 x 4



M6x25 x 4

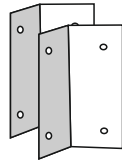




x 2

A - Headboard

B - Footboard



1

Assemble a bolt in each hole.

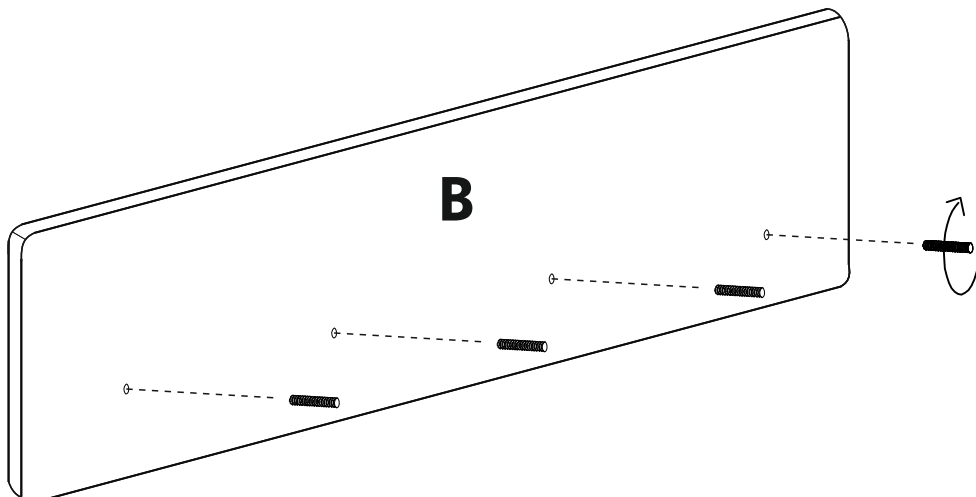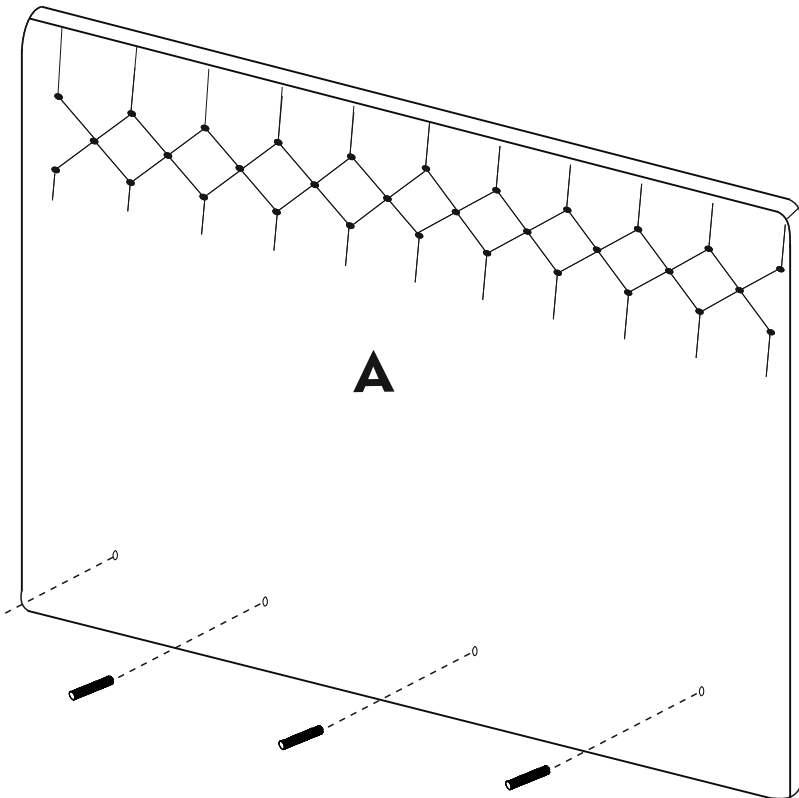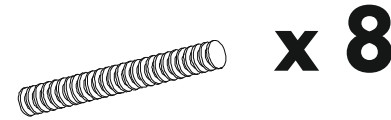

2





Place the frames as shown ,
add washers and assemble nuts on each bolt

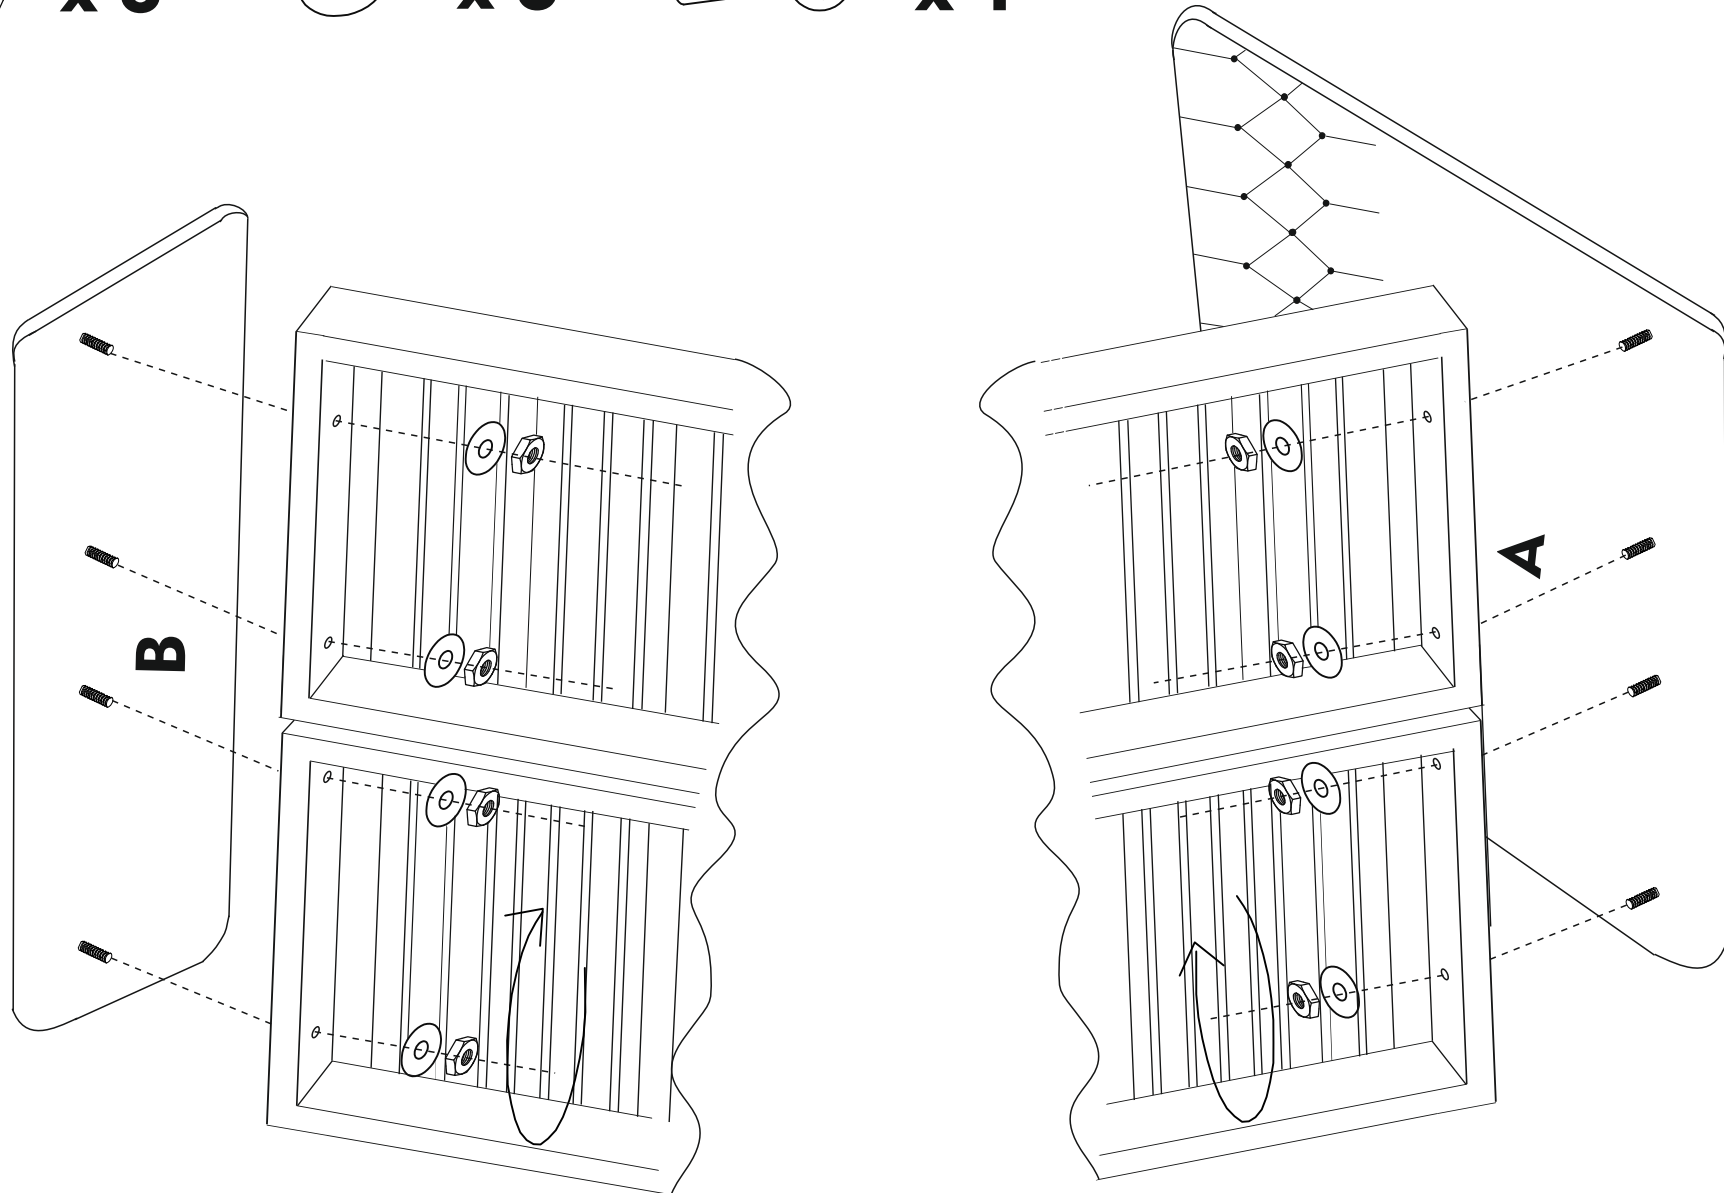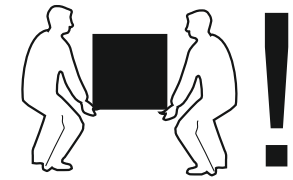


3

Assemble the board in the middle of the frames, between headboard and footboard


Middle board **x 1**

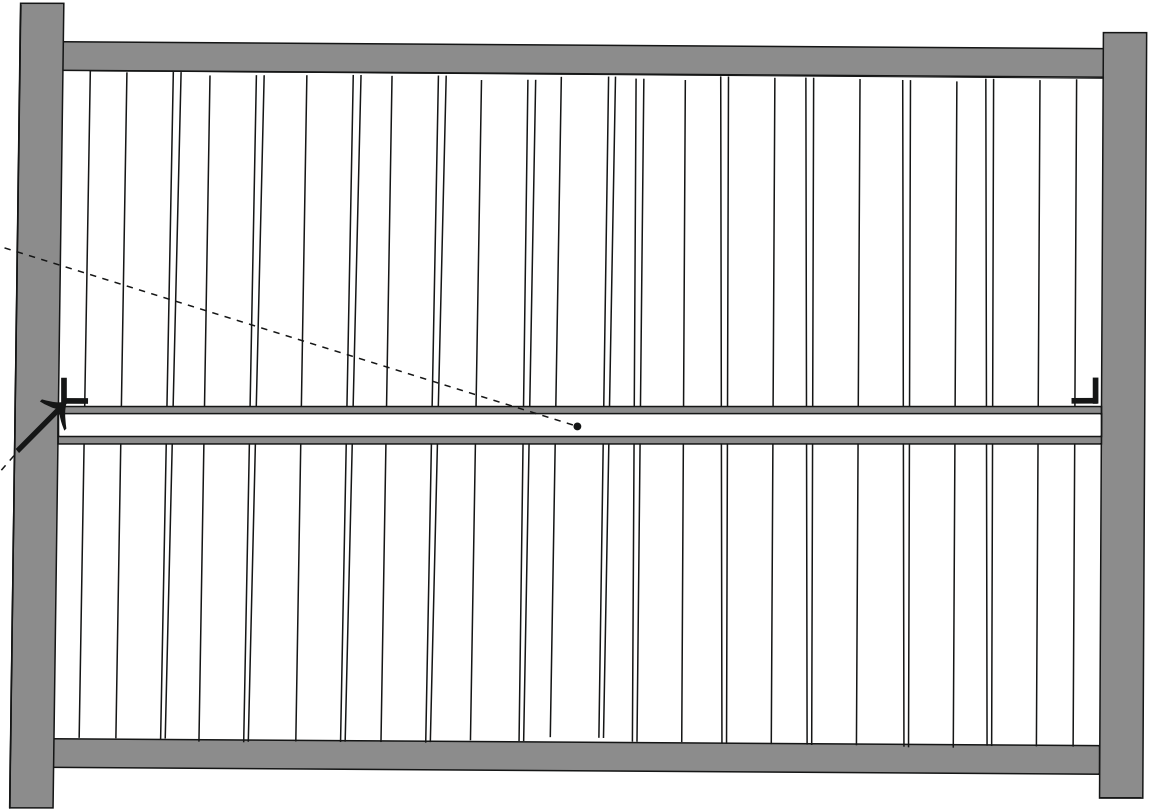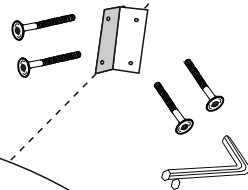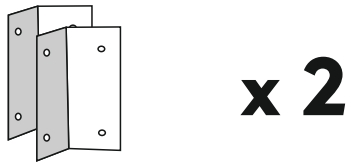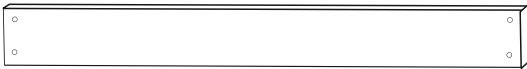


**M6x45
for the headboard /
footboard**

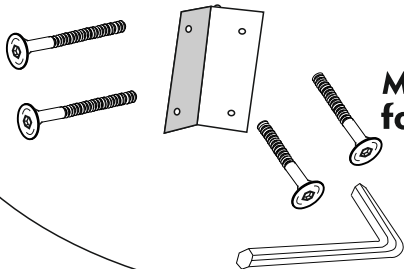

**M6x25
for the middle board**

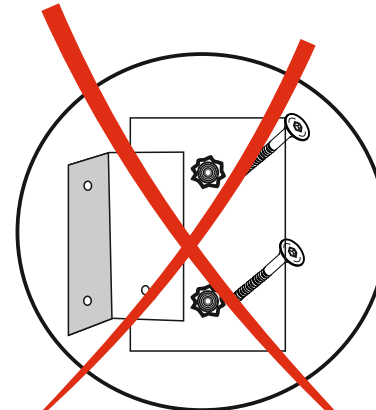

NOT OKAY

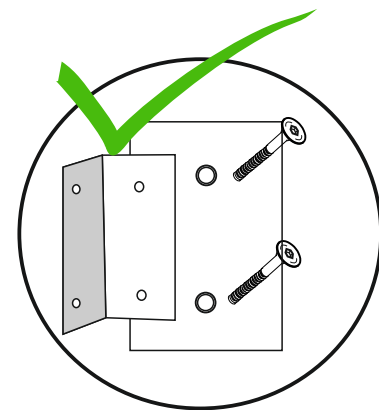

OKAY



If you make a purchase for a side board or drawer, please look for the assembling instruction in their packages.

A

Side board x1



B

Drawer x2

